

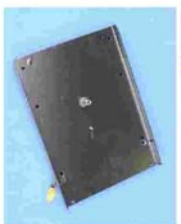



Iveco Daily 2000+

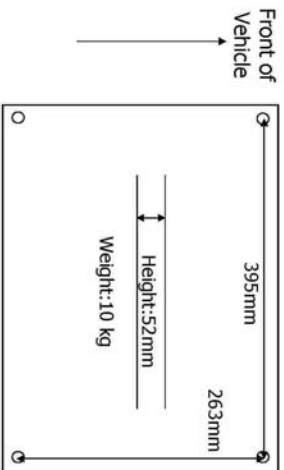


Flat Ducato – 2000-July 2006  
Peugeot Boxer – 2000-July 2006  
Citroen Relay – 2000-July 2006  
Talbot Express  
Flat Scudo  
Iveco Daily up to 2000

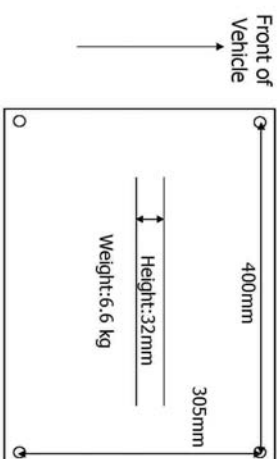


Renault Master  
Vauxhall Movano

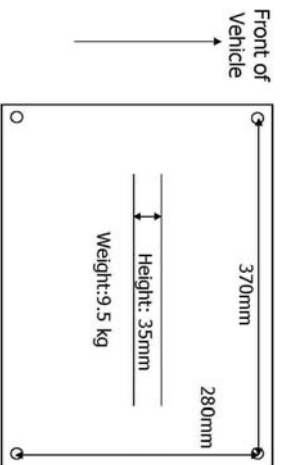


Vauxhall Vivaro  
Renault Traffic  
Nissan Primastar

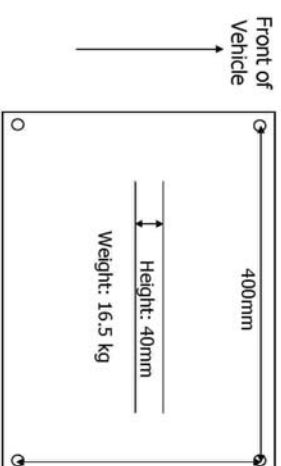


Ford Transit 2000 +  
Passenger side only.  
Drivers swivel is not available.

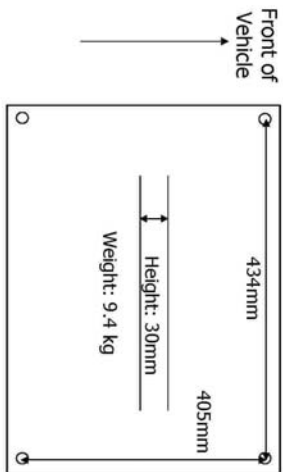


VW T2-T3

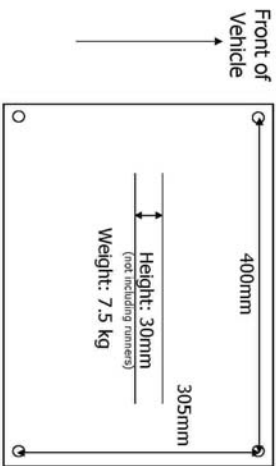

VW T4 up to '96


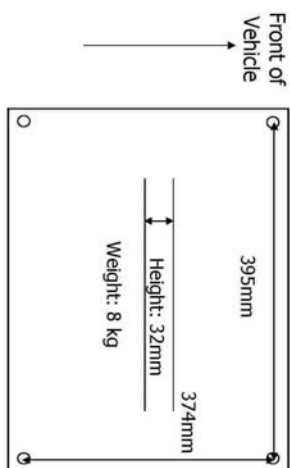


Ford Transit 92-99  
6 weeks lead time required  
Drivers swivel is not available

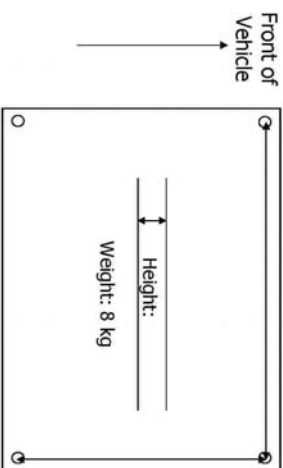

Measurements currently unavailable. Please contact us for further details.

Mercedes Sprinter  
LT35  
LT36

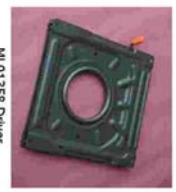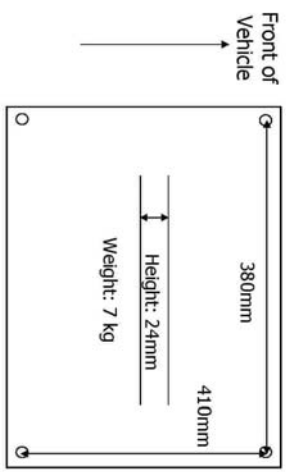

VW T4 97+

