





Iveco Daily 2000+

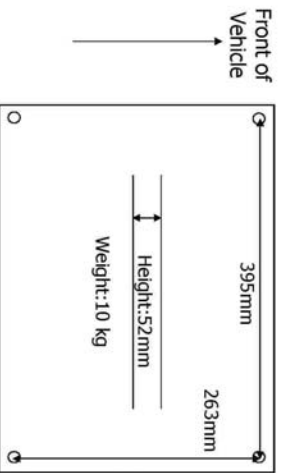


Renault Master
Vauxhall Movano

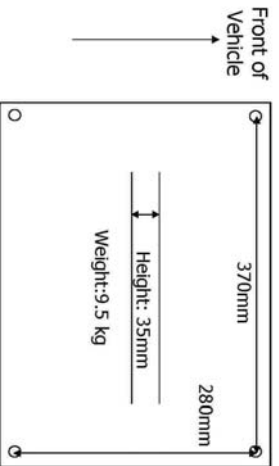


Flat Ducato – 2000-July 2006
Peugeot Boxer – 2000-July 2006
Citroen Relay – 2000-July 2006
Talbot Express
Flat Scudo
Iveco Daily up to 2000

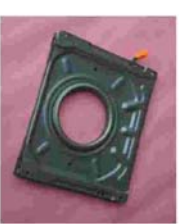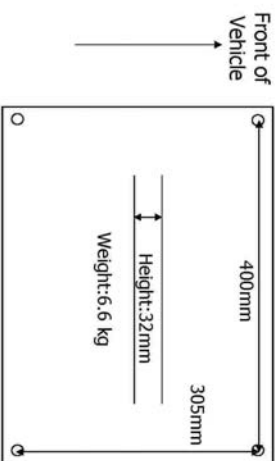


Vauxhall Vivaro
Renault Traffic
Nissan Primastar

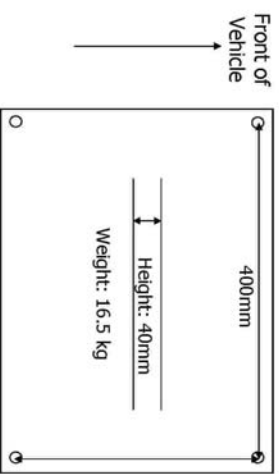


Ford Transit 2000 +
Passenger side only.
Drivers swivel is not available.

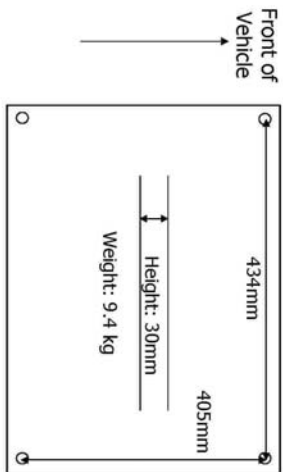


VW T2-T3

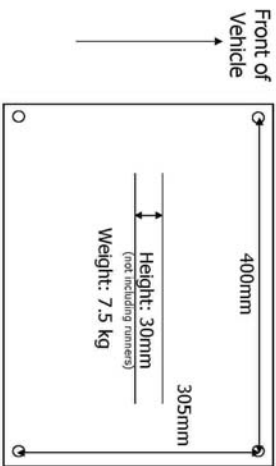

VW T4 up to '96


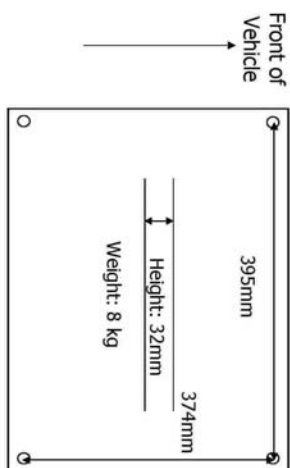


Ford Transit 92-99
6 weeks lead time required
Drivers swivel is not available

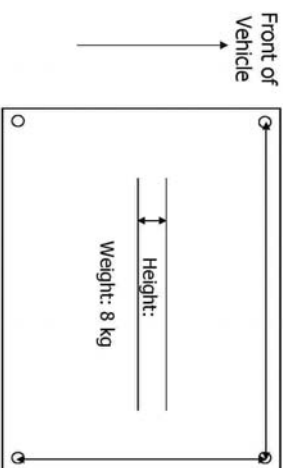

Measurements currently unavailable. Please contact us for further details.

Mercedes Sprinter
LT35
LT36

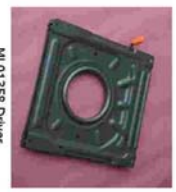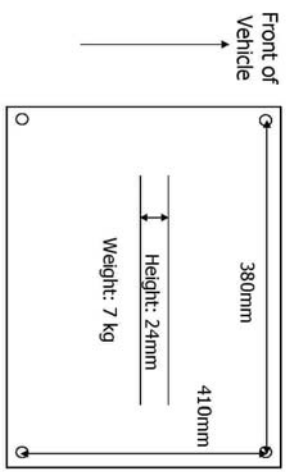

VW T4 97+

